


Falcon

Scale Models



Toyota Supra (Tamiya 24371, 24351) – Rear wing

Catalog no.: FSM C 17

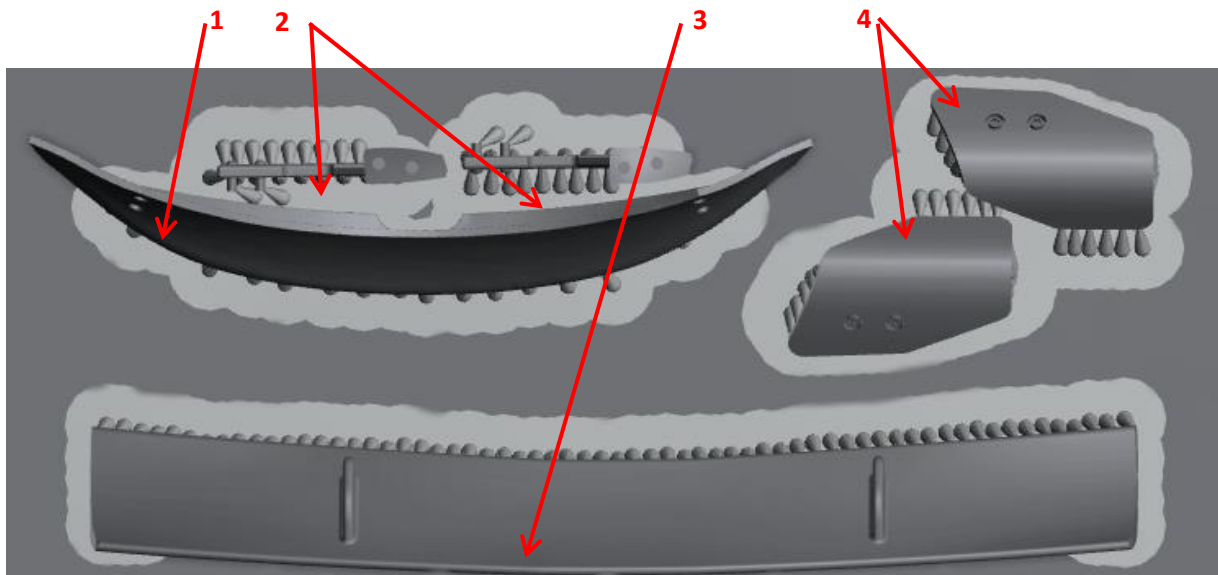

Parts list:

Part no.	Part name	Part no.	Part name
1	Template x1	3	Main wing x1
2	Supports x2	4	Winglets x2


Installation guide

Cut all parts with sharp cutters like Tamiya 74123. Do not break off parts.


Use CA glue to join resin parts together as well as to join resin parts with the ones from the base kit.


Installation

Using masking tape temporary position the installation template (1) on the part A12 from the base kit. Remember to keep the template symmetrically in relation to A12 and drill 4 holes.

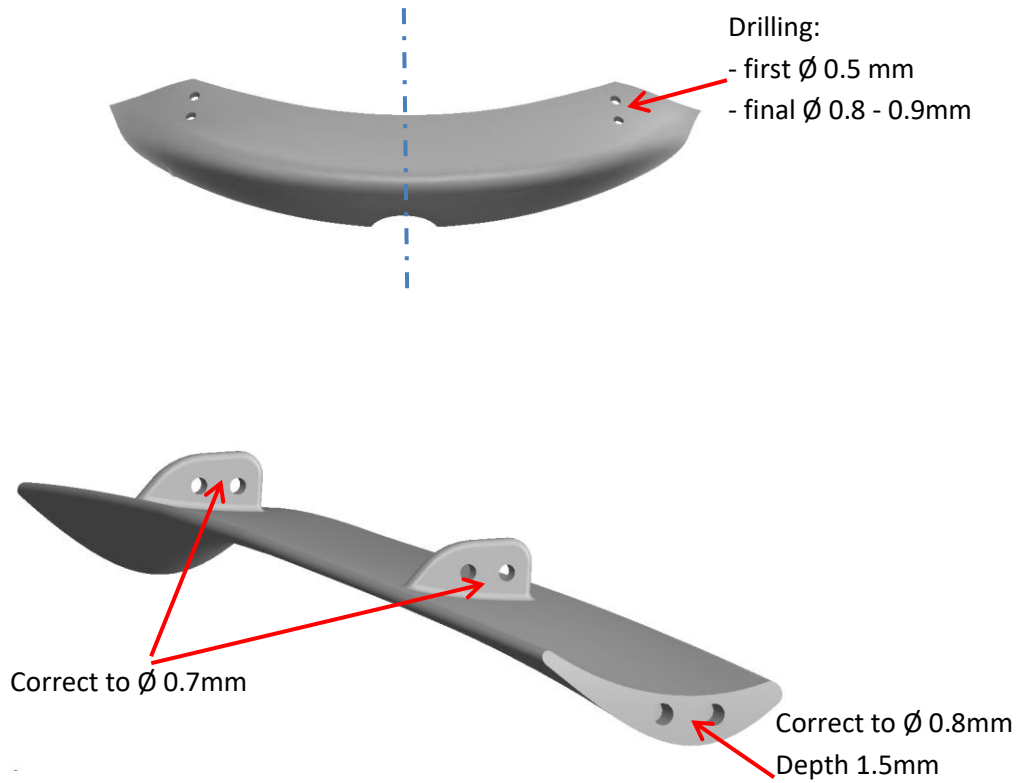

Assembly

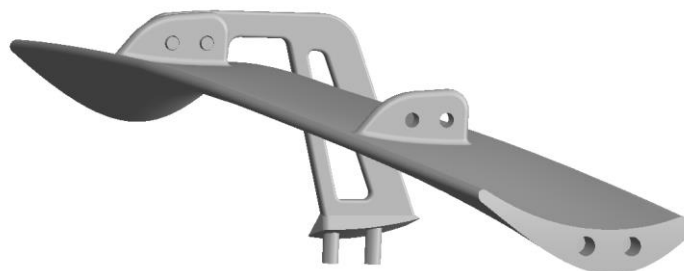

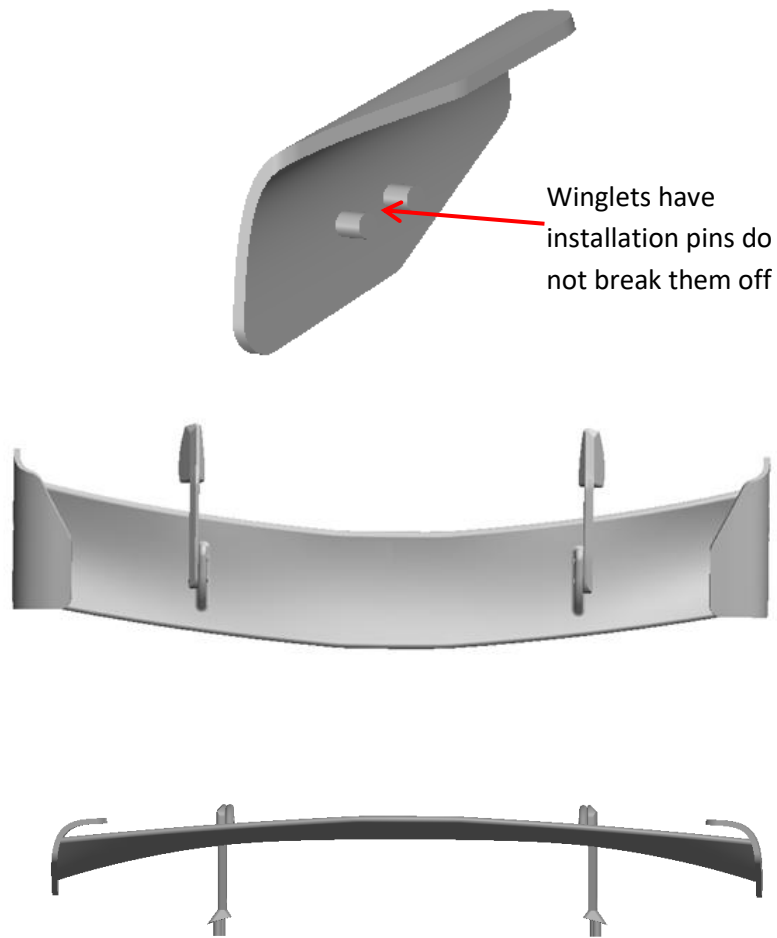

Photos

