




Honda CB 1000 F (Tamiya 14144) – chain

Catalog no.: FSM P014

Installation guide

1. Remove all supports holding the chain. Use sharp cutters like Tamiya 74035. Do not break off the chain. See the video on supports removal at www.falconscalemodels.com in the manual section.
2. Remove all the supports holding screws having in mind that rear sprocket screws should have an installation pin.

Properly cut off part

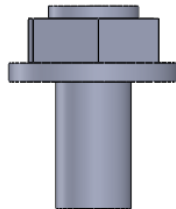


3. Remove all the supports holding sprockets and smooth the back surface of the sprockets.
4. If needed using 0.8mm drill correct holes in rear sprocket in which the screws will be installed.
5. After painting install screws in the sprockets using CA glue or Micro Kristal Klear.
6. Install the sprockets inside the chain – see pictures below.


See the video on sprocket installation at www.falconscalemodels.com in the manual section.


Gently widen the chain and insert the sprocket onto the central pints of the chain arc.

In the next step, lightly raise the chain and pull it in the direction of the opposite sprocket to place all the pins on the sprocket. Secure the sprockets position using CA glue or Micro Kristal Klear having in mind remark 2 from step 5.

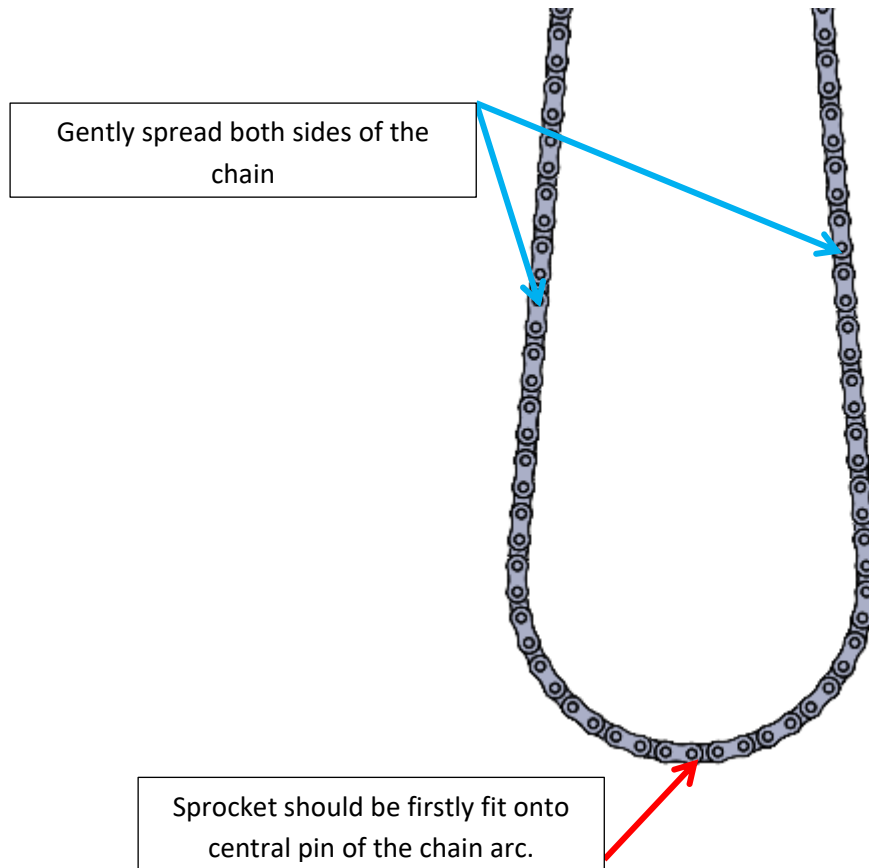

Proper position of the sprocket inside the chain.

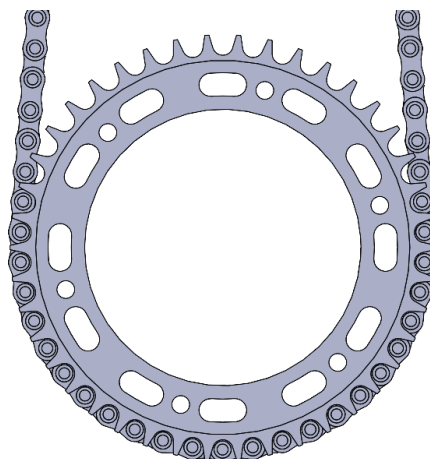

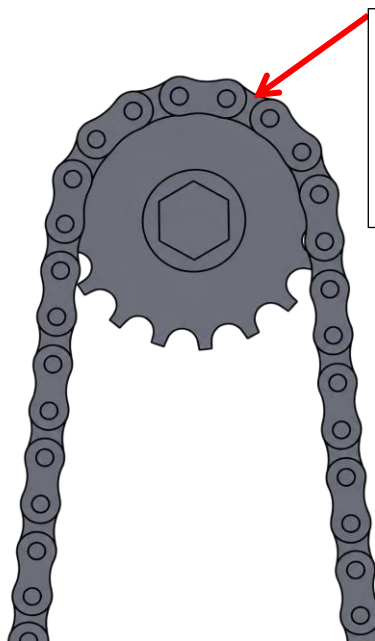

The front sprocket can be installed in the same way as the rear one, or the chain can be split (arrow position) before installation and glued afterward.